

Charts and maps

GARMIN Australia & New Zealand Marine Charts Garmin Navionics Vision+™ | NVPC012L | microSD™/SD™ and One-year Subscription

Garmin code: 010-C1278-00

Coverage: Detailed coverage of the eastern and southern coast of Australia from Mornington Island to Fowlers Bay. Coverage includes the entire Cape York Peninsula, the Great Barrier Reef, Cairns, Brisbane, Sydney, Melbourne, Adelaide, Tasmania, Norfolk Island and Port Moresby, PNG.

Australia, Northeast - Inland and Coastal Marine Charts Garmin Navionics Vision+™ | NVPC027R | microSD™/SD™ and One-year Subscription

Garmin code: 010-C1281-00

Coverage: Detailed coverage of northern and eastern Australia from Wolcott Inlet to Brisbane and the Gold Coast. Coverage includes the Great Barrier Reef, Darwin, Cairns and Port Moresby, Papua-New Guinea.

Compatible devices

ECHOMAP

ECHOMAP™ 75sv
ECHOMAP™ CHIRP 95sv
ECHOMAP™ UHD 75cv
ECHOMAP™ UHD 75sv
ECHOMAP™ Ultra 105sv
ECHOMAP™ Ultra 105sv with GT56UHD-TM transducer
ECHOMAP™ Ultra 125sv
ECHOMAP™ Ultra 125sv with GT56UHD-TM transducer
ECHOMAP™ 1022xsv
ECHOMAP™ 1222xsv /Plus/Touch
ECHOMAP™ 1253sv
ECHOMAP™ 75sv
ECHOMAP™ 75sv

GPSMAP

GPSMAP® 753xsv
GPSMAP® 953xsv
GPSMAP® 8410xsv
GPSMAP® 8412xsv
GPSMAP® 8416xsv